 


# WHITE ORCHID

Spin Brush

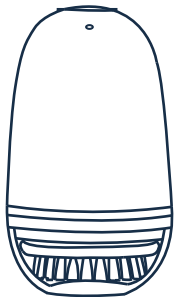

USER MANUAL & WARRANTY INFORMATION



## Contents

01	.....	Introduction
02	.....	Important
03	.....	Important
04	.....	Product Mix
05	.....	Function Guide
06	.....	Function Guide
07	.....	How to charging
08	.....	How to remove or replace the brush head
09	.....	Cleaning the sonic facial cleansing brush
10	.....	Warranty terms and conditions
11	.....	Environment
12	.....	Specifications
13	.....	Disclaimer

## Introduction

Congratulations on your purchase of the Sonic Facial Cleansing Brush. Skin cleansing is essential in daily skin care. To remove the dirt and sebum hidden in the skin pores, this sonic cleansing instrument uses a sound speed micro-vibration massage effect of over 300 times per second, showing in a gentle way. It is sevenfold as powerful as the traditional hand wash makeup remover and cleansing effect. Make subsequent skin care products more easily absorbed by the skin. Continuous use can improve large pores, smooth fine lines and wrinkles, adjust skin tone, and make skin smoother and more translucent.

**Before using it for the first time, please charge the facial cleansing brush to a saturated state.**

- If you use a facial cleansing brush to remove makeup, please remove eye makeup first;
- Moisten the skin and brush head with warm water, and shake off excess water from the brush head;
- Apply the cleanser on the brush head or on the face;
- Press the center button to start the facial cleansing brush and select the appropriate mode;
- According to the pulse prompt, gently use the brush head to make a circular motion on the corresponding part, do not press; (Picture on the right.)
- Long press the center button to turn off, rinse the facial skin and brush head, and then apply daily skin care products.



**Note:** Do not press hard while massaging, otherwise it will hinder the sliding of the brush head and reduce its effectiveness.

## Important

Before using the product, please read this user manual carefully and keep it for future reference.

### Danger

- Keep the charging cable dry.
- Do not charge your facial cleansing brush in a humid environment (such as a bath full of water, an open shower, or near a swimming pool).
- Do not throw your facial cleansing brush into fire.

### Warning

- When charging, the facial cleansing brush can only be used with the supplied charging cable.
- If the facial cleansing brush, accessories or charging cable is damaged or destroyed, please do not continue to use it to avoid injury.
- If the charging cable is damaged, be sure to replace it with the original charging cable to avoid danger.

### Notice


- Do not use this cleansing instrument for any purpose other than those described in this manual.
- It is recommended to charge, use and store your facial cleansing brush at a temperature between 5°C / 40°F and 35°C / 95°F.
- Regular cleaning of your facial cleansing brush can ensure better results and longer product life.
- Fully charge your facial cleansing brush at least once every 2 months to maintain battery life.

## Important

### Contraindications and warnings

- If you are taking steroids, do not use the facial cleansing brush.
  - If your skin is still in the recovery period (such as chemical or mechanical exfoliation, laser microdermabrasion, fractional laser treatment, electric wave lift or any other filling and shaping treatment in the past 2 weeks), please do not use a facial cleansing brush.
  - If you are using a pacemaker, implanted device or metal prosthesis, do not use the facial cleansing brush.
  - Do not put the facial cleansing brush directly close to your ears, otherwise it may cause temporary hearing loss.
  - If you suffer from any ear diseases (swimming otitis, ear infections and any abnormal conditions), please do not use the facial cleansing brush.
  - If you have cracked skin, cracked wounds, skin diseases or severe acne, sunburn, skin infections, etc., do not use the facial cleansing brush.
  - Do not use the facial cleansing brush on the sensitive skin area around the eyes, as the skin there is extremely delicate.
  - Do not use on the mucous membrane area.
  - This facial cleansing brush is not suitable for use by children under the age of 12, those who are physically impaired, feel or mentally impaired, or lack relevant experience and knowledge, unless someone responsible for their safety supervises or guides their use of this facial cleansing brush.
  - It is recommended that women who are pregnant or breastfeeding do not use the facial cleansing brush.
  - Do not use while sleeping or sleepy.
- Note:** If your skin is being treated by a doctor, or your skin has any bad conditions, please consult a doctor before using the facial cleansing brush.

## Product Mix

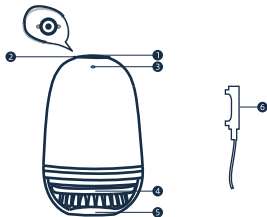

- 1 Center Button(ON / OFF)(+/-)
- 2 Magnetic Charging Contact Point
- 3 Indicator Light
- 4 Brush Head
- 5 Protection Cap
- 6 Magnetic Charging Cable

## Function Guide

**The mode of the facial cleansing brush can be adjusted:**

1. Press the center button once to turn on the facial cleansing brush.
2. After powering on, you can use the center button to select your preferred cleaning mode. There are 3 modes to choose from to meet your comfort and cleaning requirements.
3. Long press the center button to turn off the facial cleansing brush.



Gentle  
Cleansing  
Mode

Deep  
Cleansing  
Mode

 
Cuticle  
Removal  
Mode  
/  
Makeup Remover  
Assistance  
Mode



## Function Guide

### Change Zone Prompt

A complete cleansing process is 2 minutes. During the cleansing process, your facial cleansing brush will pulse at 30 seconds, 60 seconds, and 90 seconds to remind you to change the cleaning area. After the process is complete, rinse and dry your face. Then you can use skin care products as needed.

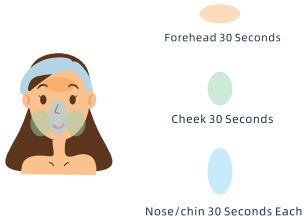

## How to charging

Your facial cleansing brush can be charged through the equipped magnetic charging cable. When charging, please place the magnetic charging cable at the charging contact point above the facial cleansing brush (magnetic attraction will guide you to place it in the correct position). Clean your face at this time The indicator light of the meter will continue to flash, indicating that the battery is charging. After charging is completed (about 2 hours), the indicator light glows steadily. Note: Each charge can be used for about 80 minutes, the specific use time depends on the use of your facial cleansing brush.




**Warning:** Before charging, make sure that there is no cleanser residue or dirt at the charging contact point between the magnetic charging cable and the facial cleansing brush. Do not charge in a place where the charging cable may be immersed in water. Please do not use the facial cleansing brush while charging, and the charging time should not exceed 24 hours. Please use only the charging cable that comes with the facial cleansing brush.

Note: If you rarely use your facial cleansing brush, please charge it at least once every 2 months to maintain its charging capacity.

## How to remove or replace the brush head:

Remove: hold the brush head, then pull out the brush head;

Installation: Hold the brush head, align the alignment point on the side of the brush head with the alignment point of the instrument, and then press down the brush head.

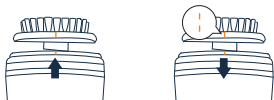

We recommend that the replacement cycle of the brush head of your cleansing brush is 90-120 days, because the bristles are fatigued for a long time, and the cleaning effect will be reduced over time. Once a week, remove the brush head from the head of the facial cleansing brush and rinse with warm or soapy water to eliminate residue.

## Cleaning the sonic facial cleansing brush

- Please clean the facial cleansing brush thoroughly after each use. Use water and soap to clean the surface of the facial cleansing brush, and then rinse with warm water. Please dry it with a lint-free cloth or towel.
- Do not rinse the magnetic charging cable under the tap or soak it in water, please wipe it with a dry cloth only.
- Note: Do not use cleaning products such as alcohol, gasoline or acetone. These substances may irritate the skin and damage the facial cleansing brush.



## Warranty terms and conditions

### One year warranty

The warranty period of the facial cleansing brush is one (1) year from the date of purchase. Any quality problems caused by instrument manufacturing or material defects are covered by the warranty. If you have any such quality problems and notify us within the warranty period, we will repair the instrument for you free of charge.

The scope of warranty covers the quality problems of parts that affect the function of the instrument, but does not include the appearance of wear caused by long-term use or the wear or damage caused by incorrect operation, negligence or accident. Any damage caused by trying to open or disassemble the instrument (or its accessory accessories) is not covered by the warranty.

Warranty needs to provide reasonable evidence that the instrument is still within the warranty period. In order to make your instrument's warranty valid, please keep the original purchase invoice properly during the warranty period.

## Environment

Disposal methods for waste electronic instrument (applicable in the European Union or other European countries with waste sorting systems).



The crossed pattern on the trash bin indicates that the instrument cannot be disposed of as household waste, but should be sent to a suitable electrical and electronic equipment collection station for disposal. Properly disposing of this instrument can prevent the used instrument from negatively affecting the environment and human health. Material recycling also helps conserve natural resources. For more information on recycling of the instrument, please contact your local household waste disposal service station or the place where the instrument was purchased.

## Specifications

Main material: ABS plastic

Dimensions: 92 x 55 x 55 mm

Weight: Instrument-About 125 grams

Battery: Lithium-ion battery 350 mAh 3.7 V

Charging time: About 2 hours

Use time for a full charge: About 80 Minutes

Standby time: 60 days

Interface: 1-button

## Disclaimer

The user of the instrument does so at his own risk. We do not assume any responsibility or obligation for any physical or non-physical injury or damage caused directly or indirectly by the use of the instrument. In addition, we reserve the right to modify this description and change the content at any time, and we are not obliged to notify any individual of these modifications or changes.

The instrument model may be changed due to improvements without notice.

For more comprehensive information, including instrument user guide updates, customer reviews, frequently asked questions, or other matters. Please contact us!