


# PEONY

## Face Cleansing Gentle Brush

USER MANUAL & WARRANTY INFORMATION

[www.praimy.com](http://www.praimy.com)

[hello@praimy.com](mailto:hello@praimy.com)

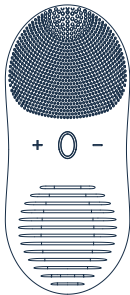

## Contents

01	.....	Introduction
02	.....	Important
03	.....	Important
04	.....	Troubleshooting
05	.....	Troubleshooting
06	.....	Product Mix
07	.....	Function Guide
08	.....	Function Guide
09	.....	Function Guide
10	.....	How to charging
11	.....	Cleaning the facial cleansing brush
12	.....	Warranty terms and conditions, Environment
13	.....	Specifications, Disclaimer

## Introduction

Congratulations on taking the first step towards flawless skin by acquiring this facial-cleansing and anti-aging facial cleansing brush.

Our groundbreaking skincare facial cleansing brush will leave the skin looking naturally beautiful and radiant, as well as smoother and younger. Used as part of your daily cleansing routine, this facial cleansing brush' Cleansing Mode channels sonic pulsations to provide a much deeper clean than washing by hand, enhancing the absorption of your favorite skincare products. In Anti-Aging Mode, the facial cleansing brush works by gently directing lower-frequency pulsations on wrinkle-prone areas to help diminish the visible signs of aging. Regular use not only promises a fresher, glowing complexion right from the start, it also lays the foundation for a lifetime of younger-, healthier-looking skin.

This facial cleansing brush includes 2 different touch-points, each with a cleansing brush that suits normal, combination, sensitive or oily skin types with the strategic graduation of thinner to thicker touch-points to gently or strongly cleanse the skin depending on its needs. To maximize the skincare benefits of this facial cleansing brush, we suggest you use it for 1 minutes each morning and evening.

## IMPORTANT

### For Optimum Safety

Read this user manual carefully before you use the instrument and keep it for future reference.

- Avoid using clay-based, silicone-based or grainy cleansers, exfoliators or scrubs, as they may damage your instrument soft silicone touch-points.
- If you have a skin condition or any medical concerns, please consult a dermatologist before use.
- Cleansing with the instrument should be comfortable - if you experience discomfort, discontinue use immediately and consult a physician.
- Exercise particular care when cleansing the under-eye regions and do not bring the instrument into contact with the eyelids or eyes themselves.
- For reasons of hygiene, we do not recommend sharing your instrument with anyone else.

## IMPORTANT

### For Optimum Safety

- Avoid leaving your instrument in direct sunlight and never expose it to extreme heat or boiling water.
- Close supervision is necessary when this instrument is used by, on, or near children, as well as those with reduced physical and mental abilities.
- Never use the instrument or charger if they are damaged.
- Discontinue use if this product appears damaged in any way.
- To avoid the risk of electric shock, this equipment must only be connected to a supply mains with protective earth.
- Given the efficiency of this instrument cleansing routine, we recommend that you do not use this instrument for more than 2 minutes at a time.
- Use this instrument only for its intended use as described in this manual.

## Troubleshooting

### LED does not pulse when charger is connected?

- Battery is fully charged, ready for up to 130 full cleansing routines.
- Battery is drained and please charge.
- Charging cable is not properly connected. Check wall socket and charging port.

### The facial cleansing brush does not activate when the center button is pressed?

- Battery is empty. Recharge your facial cleansing brush.
- Interface is locked. Connect the charging cable to restore function to normal.

## Troubleshooting

### The facial cleansing brush cannot be switched off and/or interface buttons do not respond?


- Microprocessor is temporarily malfunctioning. Connect the charging cable to restore function to normal.

### The facial cleansing brush's silicone surfaces have degraded to a sticky or bubbly texture?

- Discontinue use. Silicone is highly durable, but degrades under certain conditions - consult this manual's Cleaning and Safety sections for how to prevent this.

If you do not find the answer to your specific question in the troubleshooting section, or if you have any other questions regarding the facial cleansing brush's operation, please contact us.

## Product Mix

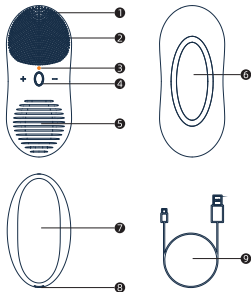

- ❶ Precision-Cleansing Zone
- ❷ General Cleansing Zone
- ❸ Indicator Light
- ❹ Center Button & (+/-)

- ❺ Anti-Aging Zone
- ❻ Induction Charging Port
- ❼ Induction Charger
- ❽ Charging Socket
- ❾ USB Line

## Function Guide

### Mode Select

1. Press the center button once to turn on your facial cleansing brush. When activated, it will be in Cleansing Mode.
2. Press the center button again to put the facial cleansing brush on Standby (on Standby, the indicator will emit a steady glow and the pulsations will stop, giving you the chance to rinse your face).
3. Long press the center button to deactivate your facial cleansing brush.
4. Double click the center button to turn on your facial cleansing brush. When activated, it will be in Anti-Aging Mode.

The intensities of this facial cleansing brush's Cleansing and Anti-Aging Modes are adjustable for comfort in 12 intensities to suit every user's comfort and efficacy requirements using the +/- buttons.

The individual stages of facial cleansing brush's cleansing and anti-aging routines are described below. After each stage of these routines, you will feel the pulsations momentarily pause and see the indicator light flash, prompting you to move on to the next area of your face.



## Function Guide

### Cleansing Mode

1. In this mode, the facial cleansing brush's Cleansing Mode removes 99.5% of dirt and oil\*, as well as makeup residue and dead skin cells.

2. How to use

**Step 1:** Apply cleanser- Remove all makeup, wet the facial cleansing brush then dampen your face and apply your regular cleansing product. Turn on your facial cleansing brush by pressing the center button once, activating the Cleansing Mode.

**Step 2:** Cleanse the following zones- Every 15 seconds pulsations will pause to indicate when to cleanse a new zone.

- Cleanse your chin and cheek using circular movements and repeat on the other side.

- Starting from the center, cleanse your forehead with gentle outward circular strokes.

- Cleanse the nose by gliding up and down one side, then the other. Delicately cleanse the under-eye region using outward strokes - we suggest reducing the pulsation intensity.

**Step 3:** Rinse- Rinse and dry your face to complete the 1-minute cleansing routine. Then, apply your favorite skincare products, if any.



## Function Guide

### Anti-Aging Mode

The facial cleansing brush's Anti-Aging Mode diminishes the appearance of fine lines and wrinkles, and leaves the skin looking firmer and more elastic.

Double click the center button to activate the Anti-Aging Mode. Try spending around 12 seconds on each stage of the routine; after this interval the facial cleansing brush's pulsations will pause momentarily. Relax your face and press the facial cleansing brush's anti-aging surface to the following wrinkle-prone areas, where muscle tension can cause worry lines, crow's feet and laugh lines:

1. Region between the eyebrows;
2. Right temple;
3. Right nasolabial fold;
4. Left nasolabial fold;
5. Left temple;



After 1 minute, you will feel the pulsations pause 3 times in quick succession, indicating the end of anti-aging routine.

## How to charging

1. Connect the computer with the USB cable, turn on the computer, and connect the USB charging cable to the Induction Charger, and Place the facial cleansing brush above the inductive charger , start charging.
2. Use the adapter to charge-connect the USB cable to the adapter, connect the USB charging cable to the Induction Charger and Place the facial cleansing brush above the inductive charger , start charging.
3. The lamp shines when charged, the lamp is long bright when it is full of electricity.



**CAUTION:** Before charging, make sure the charging port and charger are free from water. Do NOT use your facial cleansing brush while charging, and do NOT charge for more than 24 hours. Never use the facial cleansing brush if it is damaged.

## Cleaning the facial cleansing brush

Notes:

- Always clean your facial cleansing brush thoroughly after use. Wash the brush surfaces with water and soap, then rinse with warm water. Pat dry with a lint-free cloth or towel.
- Never rinse the whole inductive charger under water, please wipe the induction charger with a dry towel.
- NOTE: Never use cleaning products containing alcohol, petrol or acetone, as they may irritate the skin.



## Warranty terms and conditions

### 1-YEAR LIMITED WARRANTY

This instrument for a period of ONE (1) YEARS after the original date of purchase, against defects due to faulty workmanship or materials. If you discover a defect and notify us during the warranty period, we will, at its discretion, maintenance the instrument free of charge.

The warranty covers working parts that affect the instrument's function. It does NOT cover purely cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse or neglect. Any attempt to open or disassemble the instrument (or its accessories) will void the warranty.

For any warranty claim, reasonable evidence must be provided that the date of the claim is within the warranty period. For this reason, please keep your original purchase receipt for the duration of the warranty period.

### Environment

Do not throw away the instrument with the normal household waste at the end of its life, but hand it in and official collection point for recycling. By doing this, you help to preserve the environment.



This product must be sent to the official designated recycling center for recycling and recycling.

## Specifications

MATERIALS: Body-safe silicone & ABS

SIZE: 130 \* 56 \* 28 mm

WEIGHT: 125 g

BATTERY: Li-ion 200 mAh 3.7 V

CHARGING: 3 hours

USAGE: up to 130 uses

STANDBY: 200 days

INTERFACE: 3-button

### Disclaimer

Users of this instrument do so at their own risk. Neither we nor its retailers assume any responsibility or liability for any injuries or damages, physical or otherwise, resulting, directly or indirectly, from the use of this instrument. Further, we reserves the right to revise this publication and to make changes from time to time in the contents thereof without obligation to notify any person of such revision or changes.

Please contact us for more comprehensive information, including user guide update, customer comments, frequently asked questions, etc.