Thank you for purchasing this product! In order to use this product correctly, please read this manual before use; in order to read the manual at any time when you need it. please keep this manual in a safe place.

About this manual:

The product pictures and related product features shown in this manual, as well as some nouns, can only be used as a reference. The user will use the actual product as the standard, and the referenced data comes from the company's laboratory.

### Safety Precautions

O Danger

Be sure to read the safety precautions before use. Please use this product correctly according to the contents and recommendations of the manual.

The product should be cleaned in time after use to avoid accumulation of grease and its residues.

Related content:Incorrect actions can lead to Danger personal injury Related content:Incorrect operation can


Caution result in personal safety or property damage

# Please use the charging cable supplied with this produ

- or the charging cable that meets the product specifications and connect the charger plug to the household socket correctly to avoid malfunction or fire caused by heat.
- Since this product has a built-in rechargeable battery, d not put it in a fire or use it in a high temperature environment
- which may cause malfunction or fire due to heat. If the product is unusually hot or deformed, damaged, o
- smelly, do not use it to avoid the risk of electric shock and fire.
- To prevent the occurrence of danger, do not use it with medical electronic equipment.
- It is strictly forbidden to use a person who has undergone cardiac surgery or a medical electronic device such as a pacemaker or an embedded defibrillator placed inside the
- For first-time use or sensitive skin, please try a small area of skin and confirm the condition of the skin before using.

 If the machine is damaged, in order to avoid danger, it must be repaired by the manufacturer, its maintenance department or a specialist in a similar department.

- Do not use this product (such as alcohol, benzine, spray, etc.) near flammable or explosive materials, which may result in fire or explosion
- Please turn off the power before cleaning and maintenance.
- specified in this manual to avoid malfunction or fire due to heat. When using, if the product is abnormally hot, please stop using it immediately and shut it down.
- faulty state may have adverse effects on the body or other
- otherwise it may cause a burning sensation.
- sensory or mental problems, or those who lack experience and knowledge (including children), unless supervised by a guardian and instructed in the use of the product, and responsible for the safety of the user.
- Do not immerse the appliance in water or rinse it directly with a water tap. If you feel any discomfort in your skin or body, stop using it
- Please do not store this product in a humid environment.
- When using, remove precious metal objects and watches.
- Do not use this product in the following situations: -During pregnancy, lactating or menstruating women. -Allergic people have skin diseases, skin inflammation, skin
- irritation, other skin diseases and severe sunburn. -People with skin damage, wetness, swelling, etc.
- The person who has just finished surgery and is recovering. -Due to the upper fracture or the plastic face, the metal has been received on the face or in the body, and the silicon
- polymer is embedded in the surgery. -People with heart disease, malignant tumors, epilepsy, diabetes, infectious diseases, acute conditions.
- -Long-term use of steroid hormone drugs or liver dysfunction caused by capillary vasodilatation. In the past 3 months, surgery has been performed at the site
- of use, with long-lasting laser or deep chemical stripping.

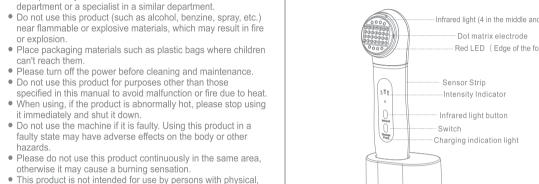

## How to Use [ Charging ]

For the first time, please fully charge the machine before using it.

- During charging, the charging indicator lights up in red
- Charging time takes approximately 3 hours. Fully charged for 3 hours; Depending on usage, the usage time will vary.


Charging port Charger power socket

[ Preparation before Use ] Wipe the machine clean with a soft cloth or cotton pad:

• Please remove the metal objects (rings, necklaces, earrings, bracelets, etc.) from your body. Please remove makeup and cleanse before use to ensure that

your skin is in good condition.

Part Identification

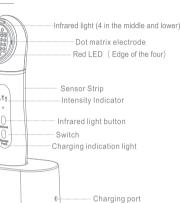

- Connect the machine to the charging cable, charger and plug in the household socket;
- When fully charged, the charging indicator lights up
- in green;

once every other day and then every 4 days.

remove makeup and

membranes etc

Operation ]

cleansing before use.

slowly heat from the inside out.

1. Apply even lotion 2. Press the power button 3. Then short press the or essence to your to turn it on starts. power button to select

the appropriate gear (default L file).

When taking care around the eyes, remove the contact lenses first.



\*This product should be used together with nutrient solution or beauty gel.

\*Please do not use this product on the throat, upper eyeball, mucous

\*For the first time, it is recommended to start from the L intensity, and

gradually select the appropriate gear according to your personal skin feeling.

\*When used the sense of current is based on the skin's own moisture level

After a set of processes, the skin is hot. When the care was first started,

the skin did not feel the obvious heat. After a few minutes, it began to

\*During the nursing process, the skin may feel hot or slightly tingling.

Some users may feel a slight redness after using the skin. This phenomenon

usually disappears within a few minutes after use. If the user feels abnormal

skin fever during use. It is recommended to stop using it and first cool

\*For the first half month of the Thermage using, it is recommended to use it

\*Do not stop in one place or squeeze the skin while using it.





4. Press the infrared light 5. Hold the main unit with 6. After the care, press button as needed to turn your hand and operate it the power button again

pull back to the back of the ear with force, and then pull down from the back



The length of stay depends on your own feelings. If you feel that please remove it.Long stays can cause burns to the skin. Use 10 minutes for the entire face and 5 minutes for the half

Key Points

Key Points



[ Nursing Method ]

he beauty head is placed on the part coated face and 5 minutes for the half with the essence or the care product containing face. the "active gene repair function", and move the machine back and forth along the skin texture with the skin during the movement, and the force is

Dredge lymphatic care Move in a circular motion about the position that the aorta near the clavicle, repeat the entire

face and 5 minutes for the half of the aorta near the clavicle, and force the outer ring upwards to the back of the ear, then pull down the aorta to the starting point.

Reduce double chin and lighten head lines (Key Points



Put the beauty head close to the double chin. face.

of the ear to the position near the main artery of the clavicle. Then, in the opposite direction, pull the clavicle gently up to the humerus, and then pul forward to the position of the double chin, repeatthe whole set of action



Hold the beauty head against the chin, forcing the circle to the earlobe, an then pull back to the back of the ear along the ear, pull it down from the bac of the ear to the collarbone; then in the opposite direction, pull the clavicle gently up to the humerus, and then pull forwardto the chin position, repeat the Key Points Repeat the entire movement

Key Points

From the chin to the ear to the

collarbone and then pull up to

the humerus, then pull back to

the chin position and repeat

Key Points



Usage time is 3 minutes. Hold the beauty head close to the corner of the mouth, pull it to the ear, the pull it back to the back of the ear along the ear, and pull it down from the back of the ear to the collarbone; then the opposite direction is pulled up from th clavicle to the corner of the mouth. The whole movement is repeated severa



eekbone. Usage time is 3 minutes. force it to the ear, then pull it back to the back of the ear along the ear, pull i down from the back of the ear to the collarbone: then in the opposite direction pull the clavicle gently up to the cheekbone, then pull forward back to the cheekbones and repeat the entire movement several times.



 
t the beauty head close to the chin, as the method of writing the C, pushing to the position of philtrum: then pull the chin in the opposite direction, the whole movement is repeated several times. Place the beauty head close to the corner of the mouth, and force it outward to circle the top of the nasolabial folds (nex to the nose) and then pull it back down to the position of the corner of the mouth. e whole movement is repeated several times.





ut the beauty head close to the nose and force it outward to circle the no are not lit You can see the light with a low-pixel mobile phone camera bridge and repeat the whole movement. the after-sales department.

Remove eye bags, eye lines and dark circles



Maintenance

soft, dry cloth.

 
suitable for commercial use.

After-sales



The C-shaped movement moves in a circular motion, and both sides are used for 12 minutes.

Kev Points




Key Points



d the beauty head close to the eye bag and pull it to the temple abou

 Fault Resolution



Battery is to working. It is a normal phenomenr

Did not touch The hand has to touch the sensor strip

the sensor strip on the side of the machine

The massage head The skin is too dry Apply evenly to the skin before use

not feel the heat. The use time is After a few minutes, the skin will slowly

4 lights in the middle This is not a malfunction. These 4 lights are infrared lights.

Protect the appliance from moisture and do not place the

This product is not waterproof and should not be immersed

• This appliance is intended for personal use only and is not

calculated from the date of purchase. During the warranty

period, we will replace parts or the entire product due to the

• We offer a one-year warranty on the product, which is

appliance in a dishwasher or microwave oven.

Please turn off the power before cleaning.

too short heat from the inside out

the skin or does The gear is too low Adjust to high level

The battery needs 6-30 minutes back

and needs to be fully charged before use

-Product problems caused by other uses, or improper handling or non-professional repairs or the use of accessories other than the company. -- Consumables or bonus accessories.

has little effect on the function of the product.

To apply for a warranty, the product must be shipped to an

--Damage caused by improper use, such as using the wrong

−The product caused by normal use is aging and wear, but it

power supply, inserting the product into an improper socket,

- -Damage caused by force majeure factors (such as lightning, earthquakes, fires, floods, etc.).
- After-sales service does not include damage caused by the above reasons.

Waste Treatment

man-made damage, etc.

The marking on this product or packaging material or accessory indicates that the material is made from a recyclable material. Separate waste into different recycling levels to facilitate the recycling of useful materials.

There is a lithium battery inside the appliance, therefore: --The battery must be removed from the appliance before it; --When removing the battery, the appliance must be turned off;

-- The battery should be disposed of safely; --Users cannot replace the battery by themselves.

- Do not use sharp or corrosive, volatile thinner cleaners. Steps to remove the battery: • It can be cleaned with a soft damp cloth and wiped with a --Remove the screw plug from the back cover of the product with a tool; back cover----
  - --Open the back cover of the machine with a tool; --Pull out the battery leads and remove the battery.

Screw plug----

## Environmental Protection

The symbol on this product or in the instruction manual or on the packaging indicates that this product cannot be disposed of as general household waste at the end of its useful life. Please consult your local government for recycling according to the classification of waste.

Specification

Product Name: 3 in 1 Combination Beauty Device Model: ELEANOR

Voltage:3.7V === Rated Power: 4.9W Charging Power Supply: 5V == 1A

Net Weight: 155g Product Dimensions: 166x46x46mm

Packing List: 1 main unit, 1 charging stand, 1 charging cable, 1 manual.

Note: In view of the consistent policy of continuous improve ment of products, the company reserves the right to change the product specifications, the actual goods are subject to shipment.

## **ELEANOR**

3 in 1 Combination Beauty Device





www.praimy.com

material or the production process.

hello@praimy.com